Question:

I just download a new driver for my WinFast TV USB II Deluxe, but how to update this new driver for TV USBII Deluxe?

Answer:


Please follow below steps to update your driver version:

(For Example : We want to update the TV USB II Deluxe WDM driver from 1.1.722.0 to 1.1.922.2)


1. Open " Device Manager", see below picture:

Under "Imaging devices ", you will see WinFast TV USB II Deluxe device:


WinFast TV USB II Deluxe

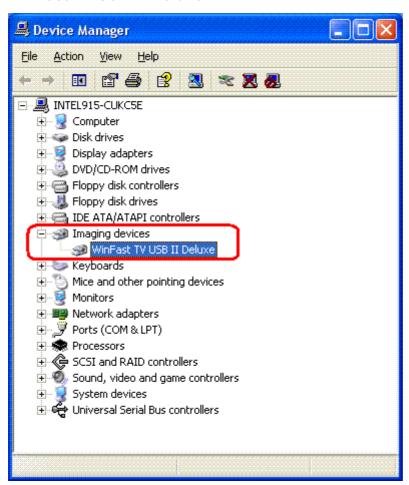

- 2. Double click the mouse on "WinFast TV USB II Deluxe ", and you will get "WinFast TV USB II Deluxe Properties" as below picture:
 - 2-1. Choose " Driver"
 - 2-2. Select " Update Driver ...", and you will get the Hardware Update Wizard about " WinFast TV USB II Deluxe "
 - 2-3. Select "Install from a list or specific location [Advanced] "
 - 2-4. Then press " Next > " button .

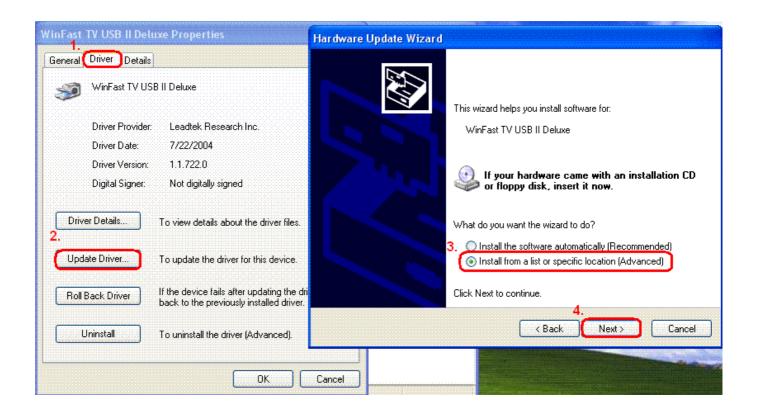


3. See the below picture, select "Don't search. I will choose the driver to install. ", then press "Next > ":

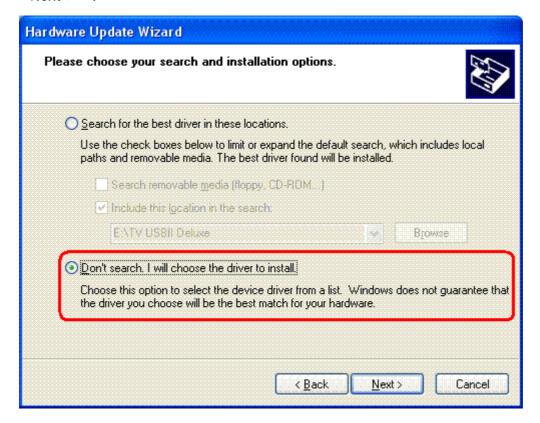


4. Then, see the below picture.


4-1. " Have Disk... ":

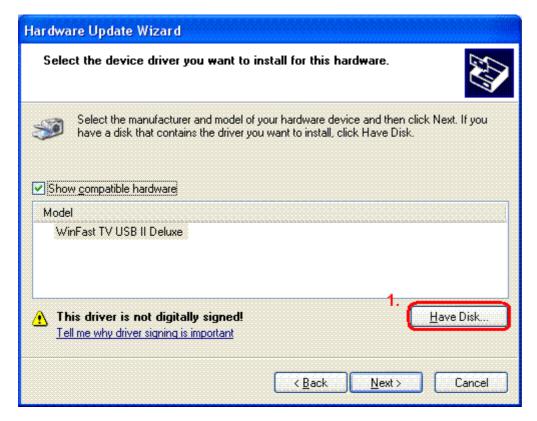


- 4-2. See" Browse... " to select the location of the latest WDM driver.
- 4-3. nd the WDM driver.
- 4-4. Then press "Open "

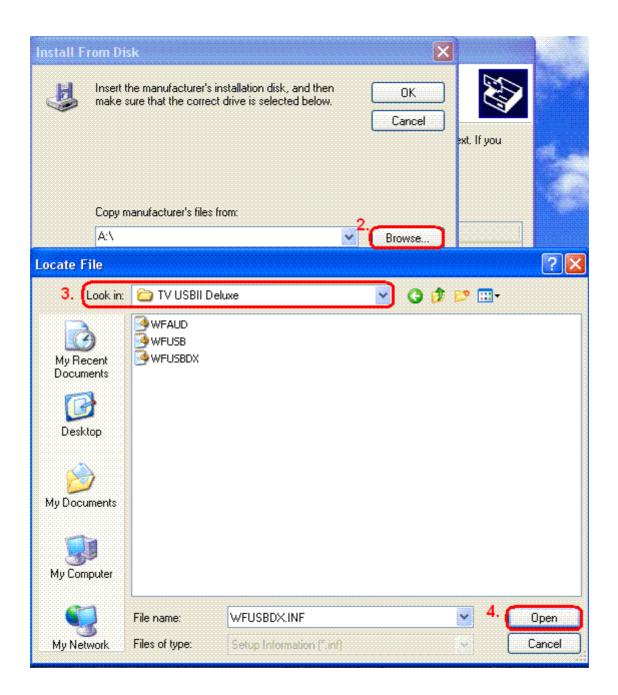


4-5. After selecting the location of TV USB II Deluxe WDM driver , press OK.

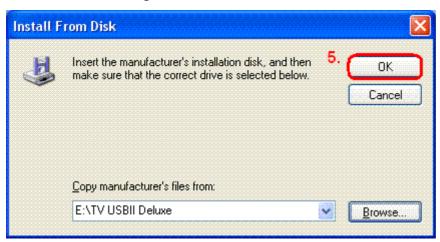


4-6. Press " Next > " .

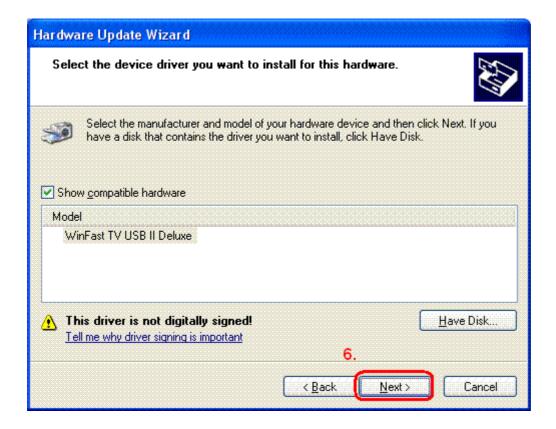


5. See below picture, and choose "Continue Anyway":

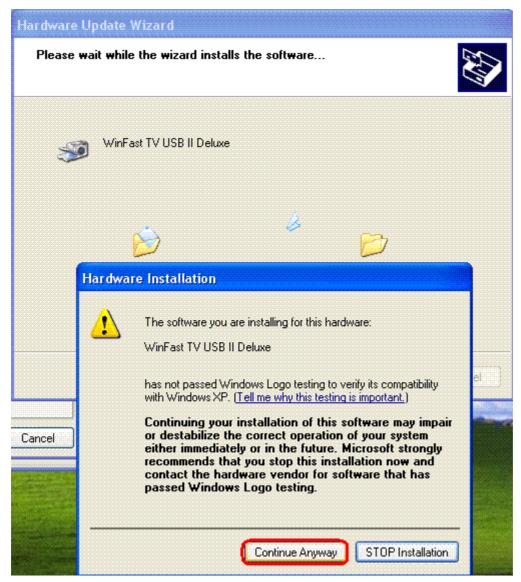


6. Press "Yes" to Overwrite the newer file.

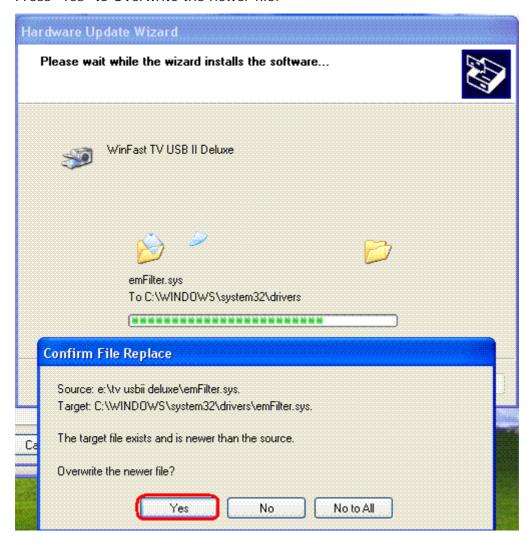

7. Click "Finish" to finish the wizard. And that meant you update this driver successfully.

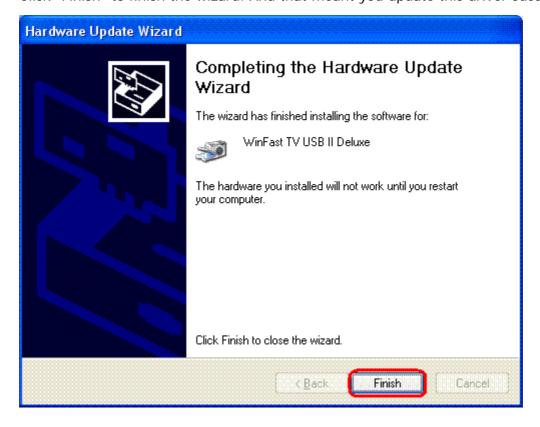


PS: The hardware you installed will not work until you restart your computer.

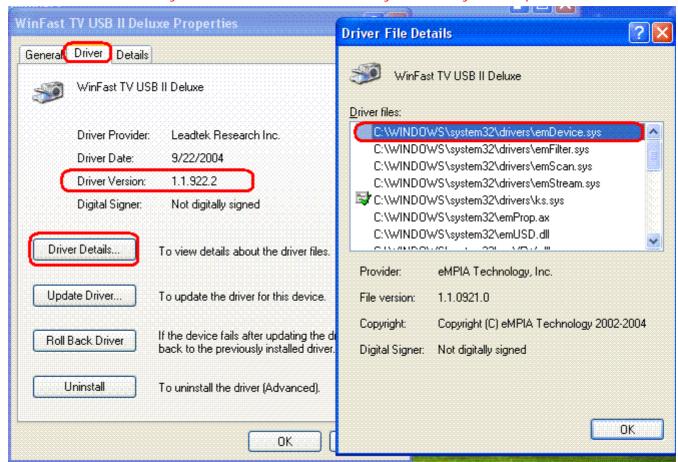


See above picture, now you can see the driver version already updated to 1.1.922.2


8. Then , you must update USB EMP Audio Device driver. Go to Device Manager again :

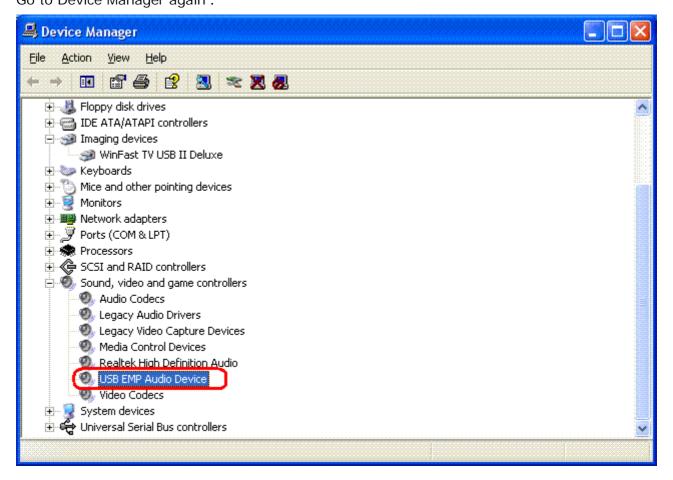


- 9. Double click the mouse on "USB EMP Audio Device ", and you will get "USB EMP Audio Device Properties" as below picture:
 - 9-1. Choose " Driver"
 - 9-2. Select " Update Driver ...", and you will get the Hardware Update Wizard about " USB EMP Device "
 - 9-3. Select "Install from a list or specific location [Advanced] "
 - 9-4. Then press " Next > " button .

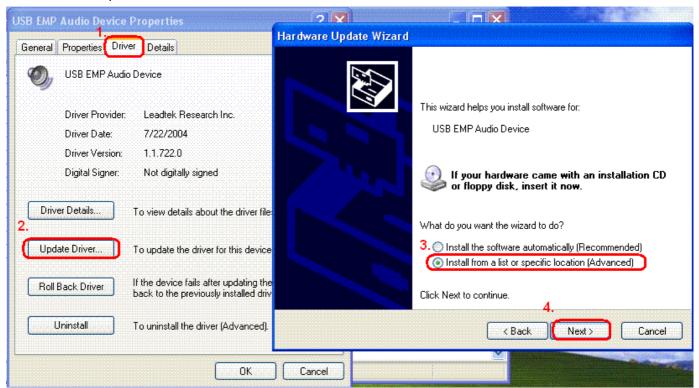


10. See the below picture , select "Don't search. I will choose the driver to install. " , then press "Next > ":

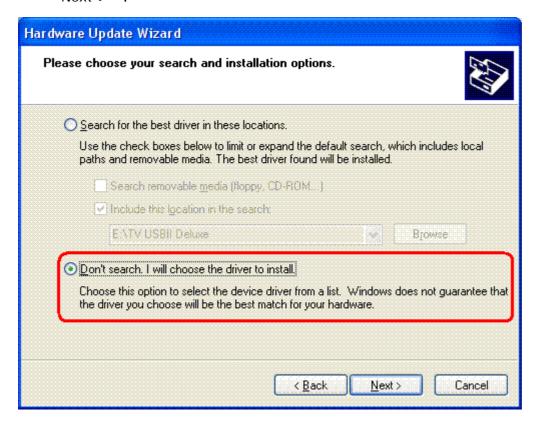


- 11. Then, see the below picture.
 - 11-1. Choose " Have Disk... ":

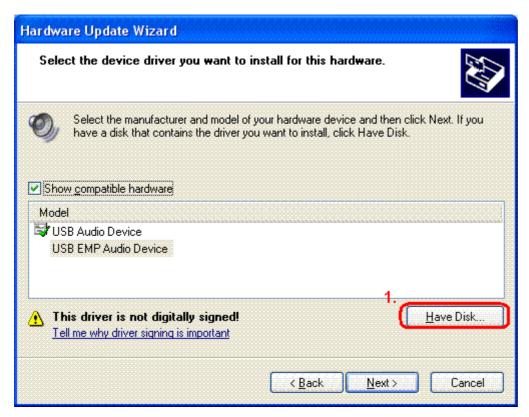


- 11-2. Choose "Browse..." to select the location of the latest driver.
- 11-3. To find the audio driver.
- 11-4. Then press "Open "

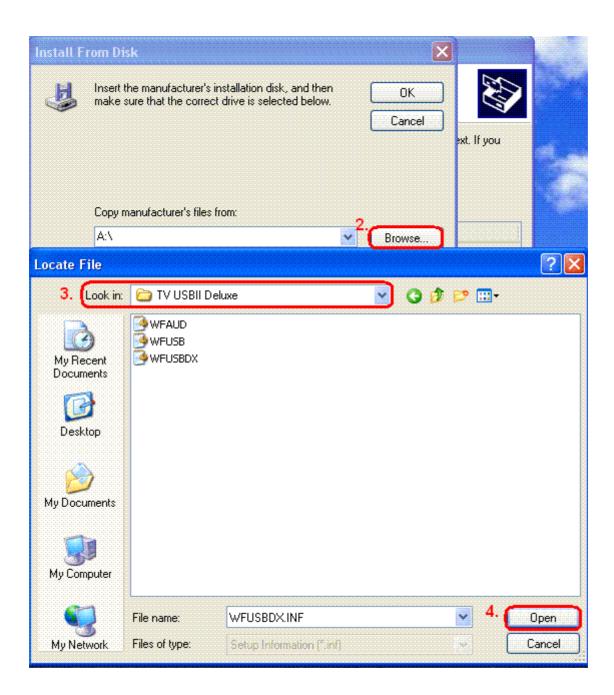

11-5. After selecting the location of USB EMP Audio device driver , press OK.

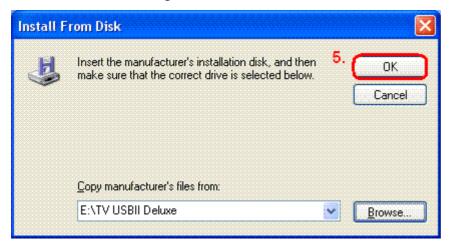

11-6. Press " Next > ".

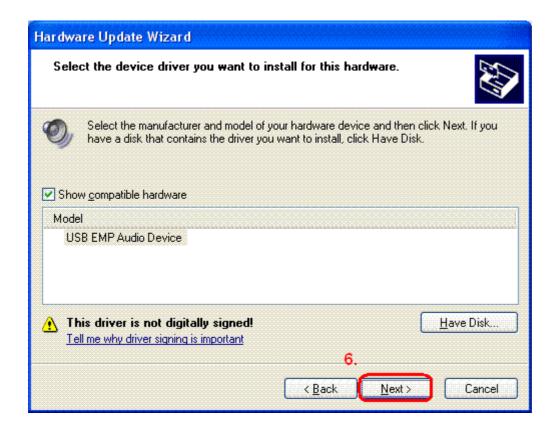


12. See below picture, and choose "Continue Anyway":



13. Click "Finish" to finish the wizard. And that meant you update this driver successfully.



PS: The hareware you installed will not work until you restart your computer.

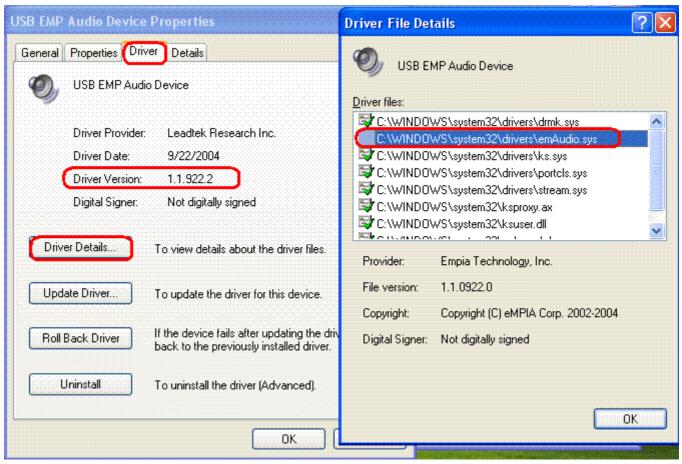

See above picture, now you can see the driver version already updated to 1.1.922.2

14. After reboot the system, enjoy your new driver of WinFast TV USB II Deluxe.